

ILAX-35 Telephone Amplifier Instructions

1. Power Requirements

The Telephone Amplifier requires two 'AAA' batteries (alkaline-type recommended). Install the batteries in the battery compartment before using.

IMPORTANT:

- A) Always disconnect the Telephone Amplifier from the telephone line before replacing the batteries.
- B) If the batteries are 'dead' (or no batteries installed in the battery compartment) the Telephone Amplifier and Telephone will not work.

C) Installation

- a) Remove the handset cord from the telephone base and insert into the socket at the bottom (marked 'handset') of the Telephone Amplifier
- b) Insert one end of the attached short cord into the Telephone Amplifier socket at the top of the unit (marked 'telephone').
- c) Insert the other end of the short cord into the handset socket located in the base of the telephone.

2. Switch Key

For most telephones, keep both 'Switch Keys' in their factory set position (2,4), but for some types of telephones it may be necessary to change the position of both 'Switch Keys'. You should make a call after installation of the Telephone Amplifier. If you cannot hear the incoming voice or your party cannot hear your voice after installation, then try changing the switches from their preset factory condition to the opposite (1,3).

Note: Keep both Switch Keys on the same side!

3. On/Off Button and Indicator

The handsets incoming voice should be normal while 'Off'. When the 'On/Off' button is pressed, then the incoming volume will increase up to 30 dB+ according to the setting of the volume knob. The indicator light will illuminate green when the Telephone Amplifier is turned 'On'.

4. Volume Control

The volume level is controlled by the 'Volume' knob located on the left side of the Telephone Amplifier. The volume of the handset will increase when you turn the knob clockwise, and decrease when turned counter clockwise. Adjust the volume to a satisfactory listening level for you by turning the knob slowly.

5. Battery Life

The battery life will depend on usage, the volume setting, and the type of batteries installed. For best results keep the volume to the lowest usable listening level possible. Turn off the amplifier after each use to preserve the batteries.

6. Troubleshooting

The Telephone Amplifier is designed for trouble free operation. However, if any problem arises during use, disconnect the Telephone Amplifier from the telephone. Reconnect the handset to the telephone. If the problem disappears then reinstall the amplifier and check the following:

- A) Ensure each cord is correctly installed and secured.
- B) Ensure the 'Switch Keys' are set to the correct position (Note 2).
- C) Check the battery for proper installation.