





# Instructions

Use of ICACSHA01 Hand Held Termination Aid - IC110 Patch Plug

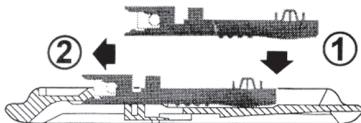

## Instructions:

- ① Place patch plug on the side of termination aid with the 110 type fitting (see drawing)
- ② Slide latch under fitting in direction of the two arrows until plug snaps in.
- ③ Place conductors into proper channels per included instructions.
- ④ Proceed to terminate conductors with 110 punch down tool.

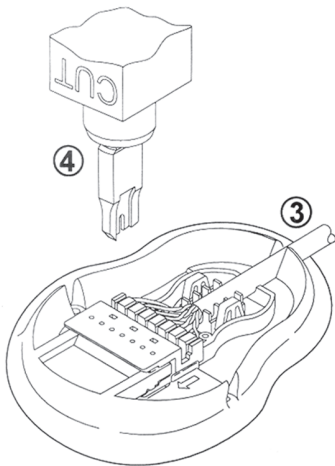


# Instructions

Use of ICACSHTA01 Hand Held Termination Aid - Modules

## Instructions:


- 1 Place HD module on proper side of the termination aid tilted and engage the hooks (see drawing)

- 2 Push down the module to engage the latch until it "Snaps"

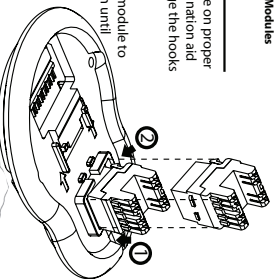

- 3 Place conductors into proper channels per included instructions


- 4 Proceed to terminate conductors with 110 punch down tool

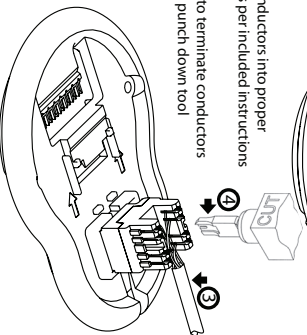

## Instructions:

- 1 Place module on proper side of termination aid with the latch facing down (see drawing)

- 2 Slide latch under fitting in direction of the two arrows until back of module snaps behind lip.

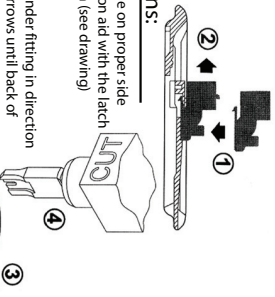

- 3 Place conductors into proper channels per included instructions

- 4 Proceed to terminate conductors with 110 punch down tool.

