



Add the VE-5x10 Surface Mount Box to Older K-1500-7's and K-1900-7's

Some older **K-1500-7** and **K-1900-7** panel phones do not have the (4) countersunk mounting holes required to mount to the **VE-5x10**, if your **K-1500-7** or **K-1900-7** does not have these mounting holes at the corners, you will need to drill (4) .187" diameter holes, countersunk 82° x .285" to the specifications in **Diagram 1** (right).

Mount the **VE-5x10** to the surface of the wall and screw the **K-1500-7** or **K-1900-7** with the (4) screws provided.

Note: You will need additional stainless steel screws and nuts to fill the vacant double gang box holes (not included).

Diagram 2

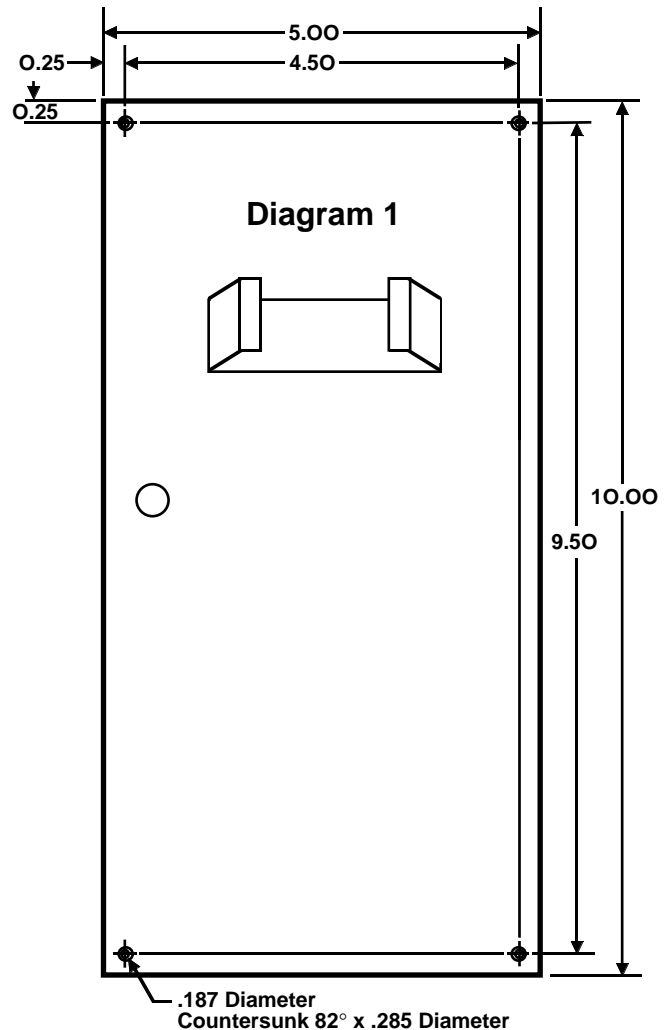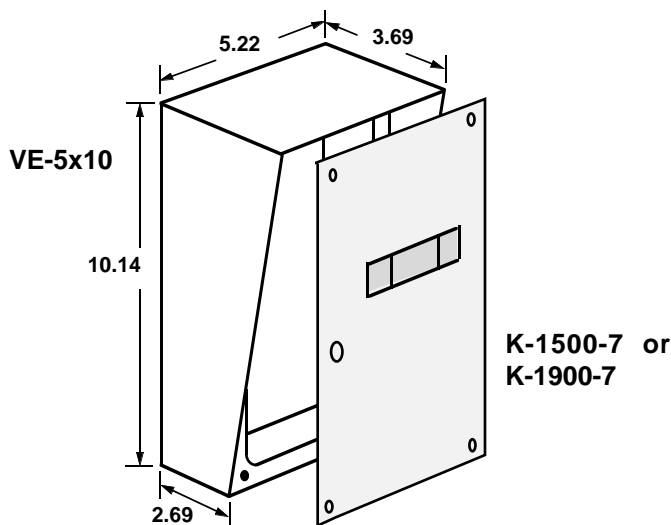

Product Support Line...(715) 386-8666

Fax Back Line...(715) 386-4345

Due to the dynamic nature of the product design, the information contained in this document is subject to change without notice. Viking Electronics, its affiliates and/or subsidiaries assume no responsibility for errors and/or omissions contained in this information. Revisions of this document or new editions of it may be issued to incorporate such changes.