



1. Strip approximately 1.50" of cable jacket and separate wires.

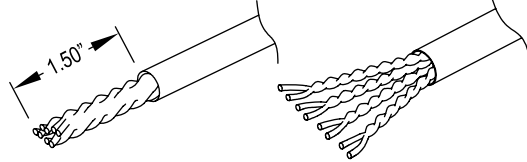


2. Choose between USOC or UTP wiring configuration.

USOC

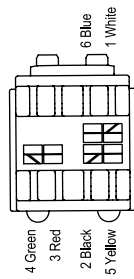


UTP wiring

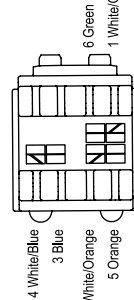

3. Sort wires and place into the IDC.

Note: For maximum performance, minimize the untwisting of individual pairs to 0.125"

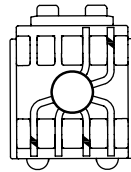

4. Terminate wires using a Punch-Down Tool.

